

# LIME CLEAN PLUS

## 水垢去除劑 Liquid Mild Acidic Cleaner

用於清除洗碗碟機內部及機身之頑居水垢。

**Removes hard water deposits and rust stains inside dishmachine.**

### Use Directions 使用方法：

1. 首先排走洗碗機積水，並清理洗碗機內之垃圾及碎屑。
2. 關掉清潔劑分配器。
3. 關掉排水閥。
4. 開動水掣並把水缸注入水至水滿線下3吋。
5. 啓動熱水掣，待水加熱至適當溫度(約20-30分鐘)。
6. 在等候熱水時，用噴壺把 **LIME CLEAN PLUS** 溶液噴灑到洗碗機噴灑系統和不能觸及的地方，包括洗碗機的外面和裏面。
7. 當缸內水溫到達適當溫度時，在每個水缸加入2.5公升 **LIME CLEAN PLUS**。
8. 啓動洗碗機操作15分鐘。
9. 關掉洗碗機和水缸熱水系統，並排走水份。
10. 關掉排水閥。
11. 把洗碗機重新注水，並再次啓動洗碗機，讓它完成整個操作程序，以沖走所有殘餘之除垢劑。
12. 徹底排走水份，帶走所有除垢劑。
13. 把清潔劑分配器重新啓動。

### 安全措施 Safety Precaution：

- In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.  
如沾及眼睛，立即用大量清水清洗，並儘快就醫診治。
- After contact with skin, flush immediately with plenty of water for over 15 minutes.  
如沾及皮膚，立即用清水沖洗15分鐘以上。
- Wear rubber gloves and other protective equipment.  
戴上膠手套及防護用具。

Ref No.: 5268AS-WC

1. Drain and remove the food soil inside the dishmachine.
2. Switch off the detergent dispenser.
3. Close the drain valve.
4. Turn on the water and fill the tank about 3 inches below the overflow level.
5. Turn on the tank heaters and wait about 20-30 minutes for heating water.
6. While waiting, spray **LIME CLEAN PLUS** to delime surfaces that the machine spray doesn't reach, including the outside and inside.
7. When temperature reaches the right temperature, pour 2.5L of **LIME CLEAN PLUS** into each tank.
8. Run the dishmachine for 15 minutes.
9. Switch off the machine and tank heaters and drain the dishmachine.
10. Close the drain valve.
11. Fill the machine with fresh water and allow the dishmachine to run the whole process.
12. Drain the machine completely to get rid of all the soil.
13. Turn on the detergent dispenser again.



卓滙化工有限公司

CHAMPION CHEMICALS LIMITED

客戶服務專線：

Service Hotline : 2475 9875